Security Services Inc.

One Town Center Road
Boca Raton, FL 33431
Phone: (561) 988-3600
FAX: (561) 988-3675

The ADT-UDACT

Universal Digital Alarm Communicator/Transmitter

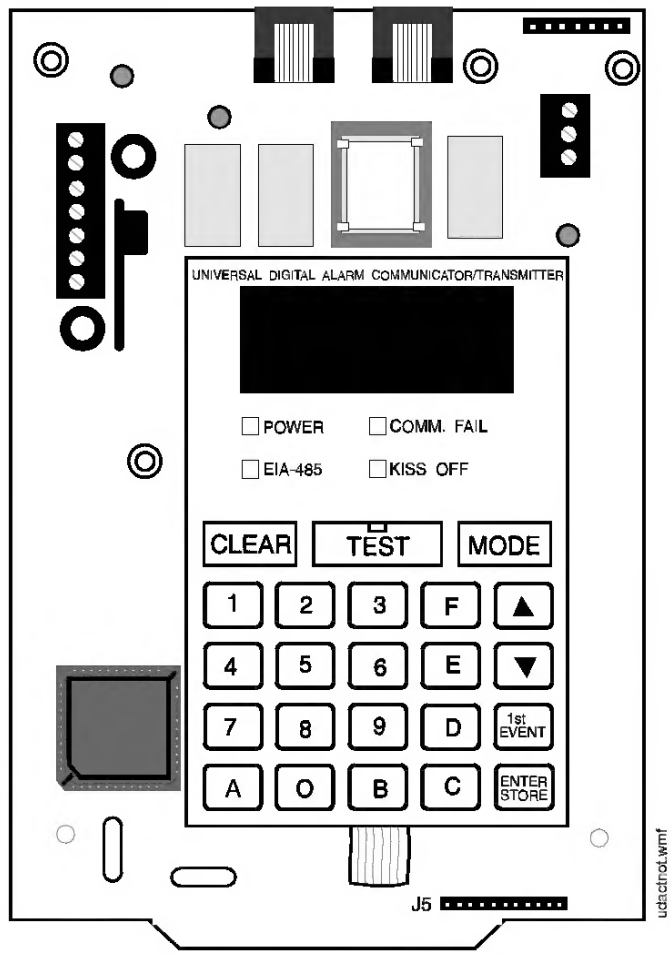

Product Information, Installation, Programming and Operation Manual

Document 50934
5/15/00 Rev: B
P/N 50934-B ECN 99-402

© 2000 ADT

Contents

Before Use

- Safety Instructions 2
- List of Bread Types and Baking Options 3
- Accessories/Parts Identification 4
- Bread-making Ingredients 6

How to Use

- Baking Bread [BAKE] 8
- Making Dough [DOUGH] 10
- When adding extra ingredients... 11
- Baking Brioche 12
- Baking Cakes 14

Recipes

- Bread Recipes
  - basic 15
  - whole wheat 16
  - rye 20
  - french 20
  - Italian 20
  - brioche 21
  - sandwich 21
- Gluten Free Recipes 22

- Dough Recipes 24
  - basic
  - whole wheat
  - rye
  - french
  - pizza

- Cake Recipes 33
  - cakes
  - teabreads

How to Clean

- Care & Cleaning 34

To Protect the Non-stick Finish

- To protect the non-stick finish 35

Troubleshooting

- Troubleshooting 36
- WARRANTY 39

Safety Instructions

Important Safety Precautions

■ Location

- Do not use the appliance outdoors or in the immediate vicinity of heat sources or in rooms where humidity is high.
- **Position the breadmaker on a firm, dry, clean, flat heatproof worktop at least 10 cm (4 inches) from the edge of the worktop.**

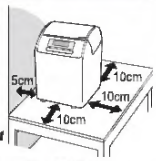

- Do not place on unstable surfaces, or on electrical items such as fridges or on materials such as tablecloths.
- During baking the casing heats up, the breadmaker should be placed at least 5 cm (2 inches) from walls and other objects.

■ Caution

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
2. Do not attempt to repair the breadmaker. Consult a Panasonic dealer and have it serviced by an authorised technician.
3. Do not immerse the unit, power cord, or plug in water or any kind of liquid.
4. Do not allow the power cord to hang over the edge of the worktop or touch a hot surface.
5. Do not remove the bread pan or unplug the breadmaker during its operation. (If the electricity supply is switched off the program sequence stops. However the appliance has a 10 minutes memory so if the power is restored within 10 minutes, the program will resume.)
6. Do not touch, block or cover steam vent during use.
7. The surfaces are liable to get hot during use.
8. To avoid burns, always use oven gloves when removing the bread pan and the finished bread. Also take care when removing the kneading blade.

9. Always keep the inside of the unit and the bread pan clean to ensure programs work successfully. (See page 34 for care and cleaning.)
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
11. This appliance is only intended to be used to make bread, dough and cakes as detailed in the following instructions.
12. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
13. Hold onto the plug when plugging into/removing from the socket.

List of Bread Types and Baking Options

■ Function Availability and Time Required

• Time required for each process will differ according to room temperature.

Bread type	Options				Processes				
	Baking option	Size	Crust	Timer	REST	KNEAD	RISE	BAKE	Total
basic Makes bread with strong white, brown, soft grain bread flour.	BAKE	●	●	●	25 min–60 min	15–30 min	1 hr 50 min–2 hr 20 min	50 min	4 hours
	BAKE RAPID	●	●	—	—	15–20 min	approx. 1 hour	35–40 min	1 hr 55 min–2 hours
	BAKE RAISIN	●	●*1	●	25 min–60 min	15–30 min	1 hr 50 min–2 hr 20 min	50 min	4 hours
	DOUGH	—	—	—	25 min–50 min	15–30 min	1 hr 10 min–1 hr 30 min	—	2 hr 20 min
	DOUGH RAISIN	—	—	—	25 min–50 min	15–30 min	1 hr 10 min–1 hr 30 min	—	2 hr 20 min
whole wheat Makes bread with strong whole wheat flour or multigrain bread flour.	BAKE	●	—	●	1 hour–1 hr 40 min	15–25 min	2 hr 10 min–2 hr 50 min	50 min	5 hours
	BAKE RAPID	●	—	—	15 min–25 min	15–25 min	1 hr 30 min–1 hr 40 min	45 min	3 hours
	BAKE RAISIN	●	—	●	1 hour–1 hr 40 min	15–25 min	2 hr 10 min–2 hr 50 min	50 min	5 hours
	DOUGH	—	—	—	55 min–1 hr 25 min	15–25 min	1 hr 30 min–2 hours	—	3 hr 15 min
	DOUGH RAISIN	—	—	—	55 min–1 hr 25 min	15–25 min	1 hr 30 min–2 hours	—	3 hr 15 min
rye Makes bread with rye flour and spelt flour.	BAKE	●	—	●	45 min–60 min	approx. 10 min	1 hr 20 min–1 hr 35 min	1 hour	3 hr 30 min
	DOUGH	—	—	—	45 min–60 min	approx. 10 min	—	—	2 hours
french Makes bread with strong white bread flour for a crispier crust and open texture.	BAKE	—	—	●	40 min–2 hr 5 min	10–20 min	2 hr 45 min–4 hr 10 min	55 min	6 hours
	DOUGH	—	—	—	40 min–1 hr 45 min	10–20 min	1 hr 35 min–2 hr 40 min	—	3 hr 35 min
Italian Makes light bread for enjoying with pasta, etc.	BAKE	●	—	●	30 min–1 hour	10–15 min	2 hr 25 min–3 hours	50 min	4 hr 30 min
brioche Makes rich flavored bread with eggs and butter	BAKE	—	—	—	30 min	25–30 min	1 hr 30 min	50 min	3 hr 30 min
sandwich Makes bread with a soft crust and texture.	BAKE	●	—	●	1 hour–1 hr 40 min	15–25 min	2 hr 10 min–2 hr 50 min	50 min	5 hours
gluten free Makes bread using gluten-free bread mix/flour.	BAKE	—	●*2	—	—	15 min	1 hour	45 min	2 hours
pizza Makes pizza dough.	DOUGH	—	—	●	(KNEAD) 10 min–15 min	(RISE) 7–15 min	(KNEAD) approx. 10 min	(RISE) approx. 10 min	45 min
bake only Bakes teabreads and cakes.	BAKE	—	—	—	—	—	—	30 min–1 hr 30 min	30 min–1 hr 30 min

*1 Only 'LIGHT' or 'MEDIUM' available. *2 Only 'MEDIUM' or 'DARK' available.

• The breadmaker will operate for a short time during the rise period (to ensure optimal gluten development).

Downloaded from www.Manualslib.com manuals search engine

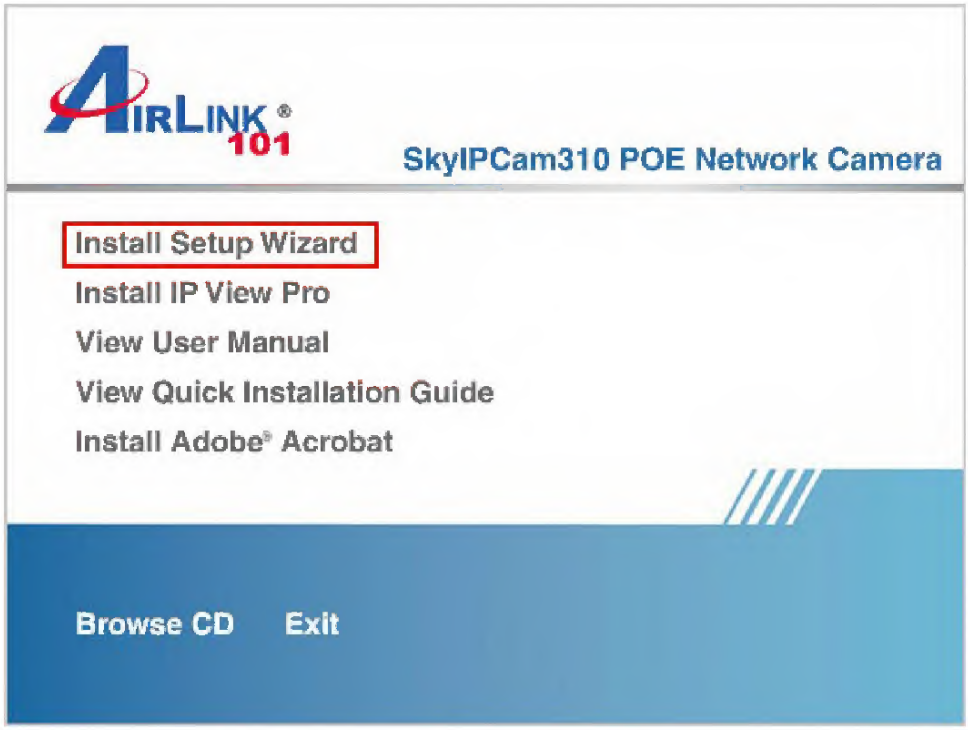

Note: *If the autorun screen does not appear automatically, go to* ***Start***, ***Run***, *type* ***D:\Wizard\Setup.exe*** *(where* ***D*** *is the letter of your CD drive) and click* ***OK***.

Step 3 Click **Next**.

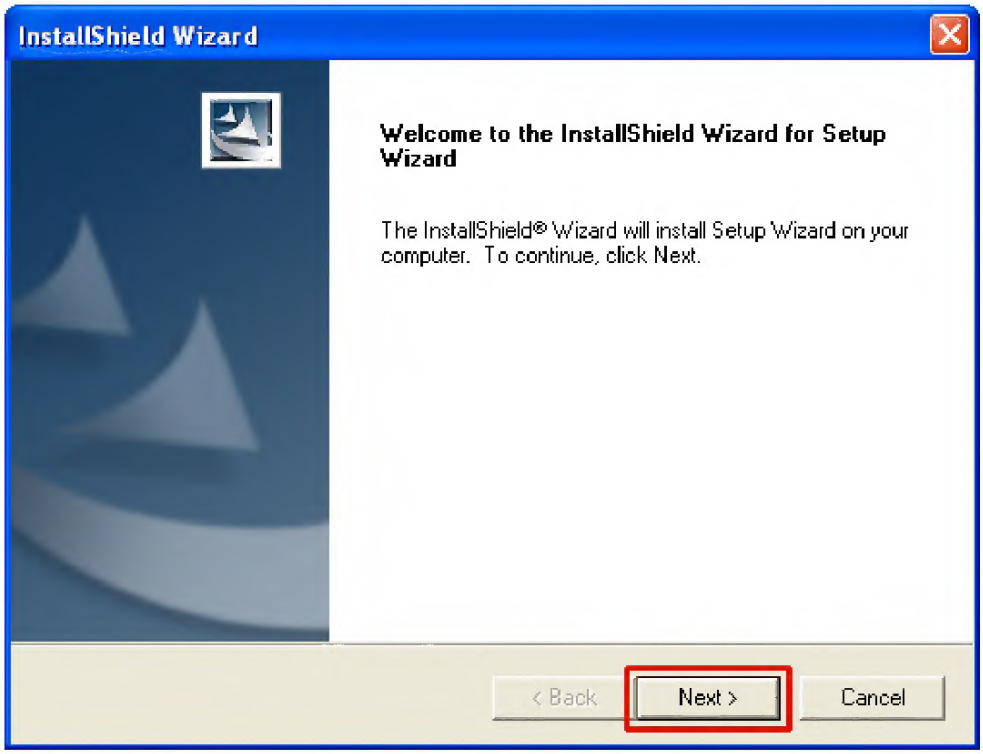
InstallShield Wizard
Welcome to the InstallShield Wizard for Setup Wizard
The InstallShield® Wizard will install Setup Wizard on your computer. To continue, click Next.
< Back
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

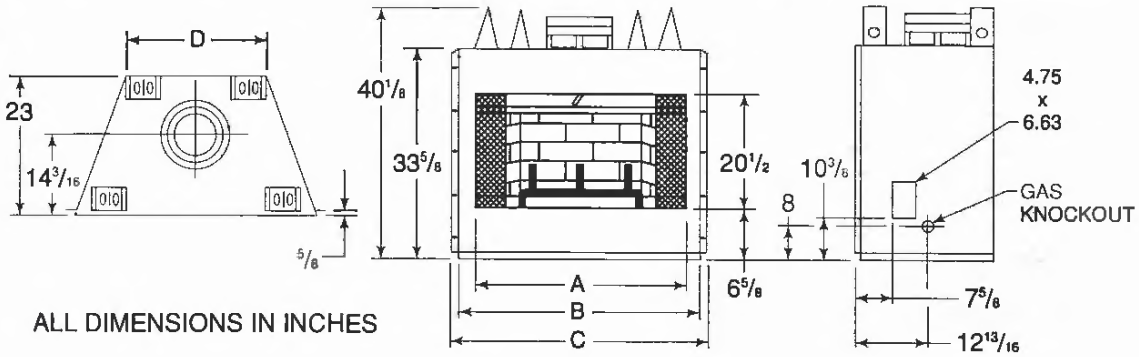

ALL DIMENSIONS IN INCHES

CAT. #	A	B	C	D
E36	36	41	43	25¼
E39	39	44	46	28¼
E42	42	47	49	31¼

HEARTH EXTENSIONS

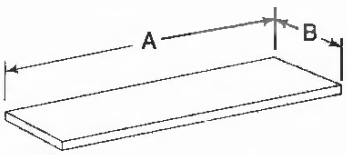

CAT. #	A	B
HX5	46"	16"
HX6	49"	16"
HX7	60"	20"

GLASS DOORS

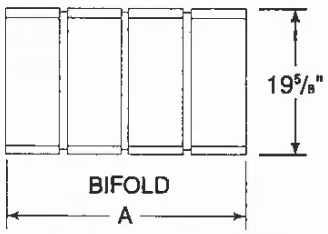

CAT. #	A
DM1036	35⅜"
DM1039	38⅜"
DM1042	41⅜"

STRAIGHT ATTIC INSULATION SHIELD

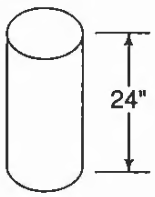

AS8

INTEGRAL GRATES

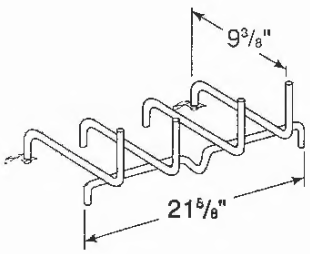

GR4
GR5
GR6

OUTSIDE AIR KIT

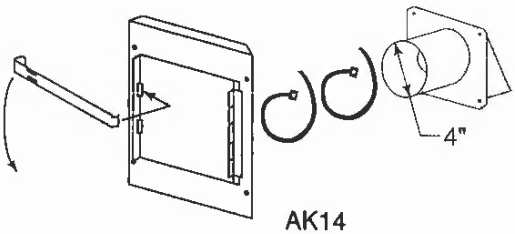

AK14

INSULATED DUCT

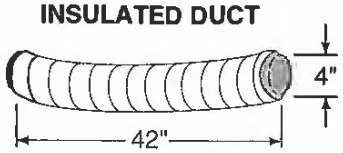

ID4

UNINSULATED DUCT

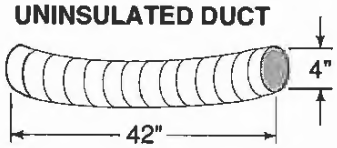

UD4

Downloaded from www.Manualslib.com manuals search engine

TOR

G ADAPTOR PG–U

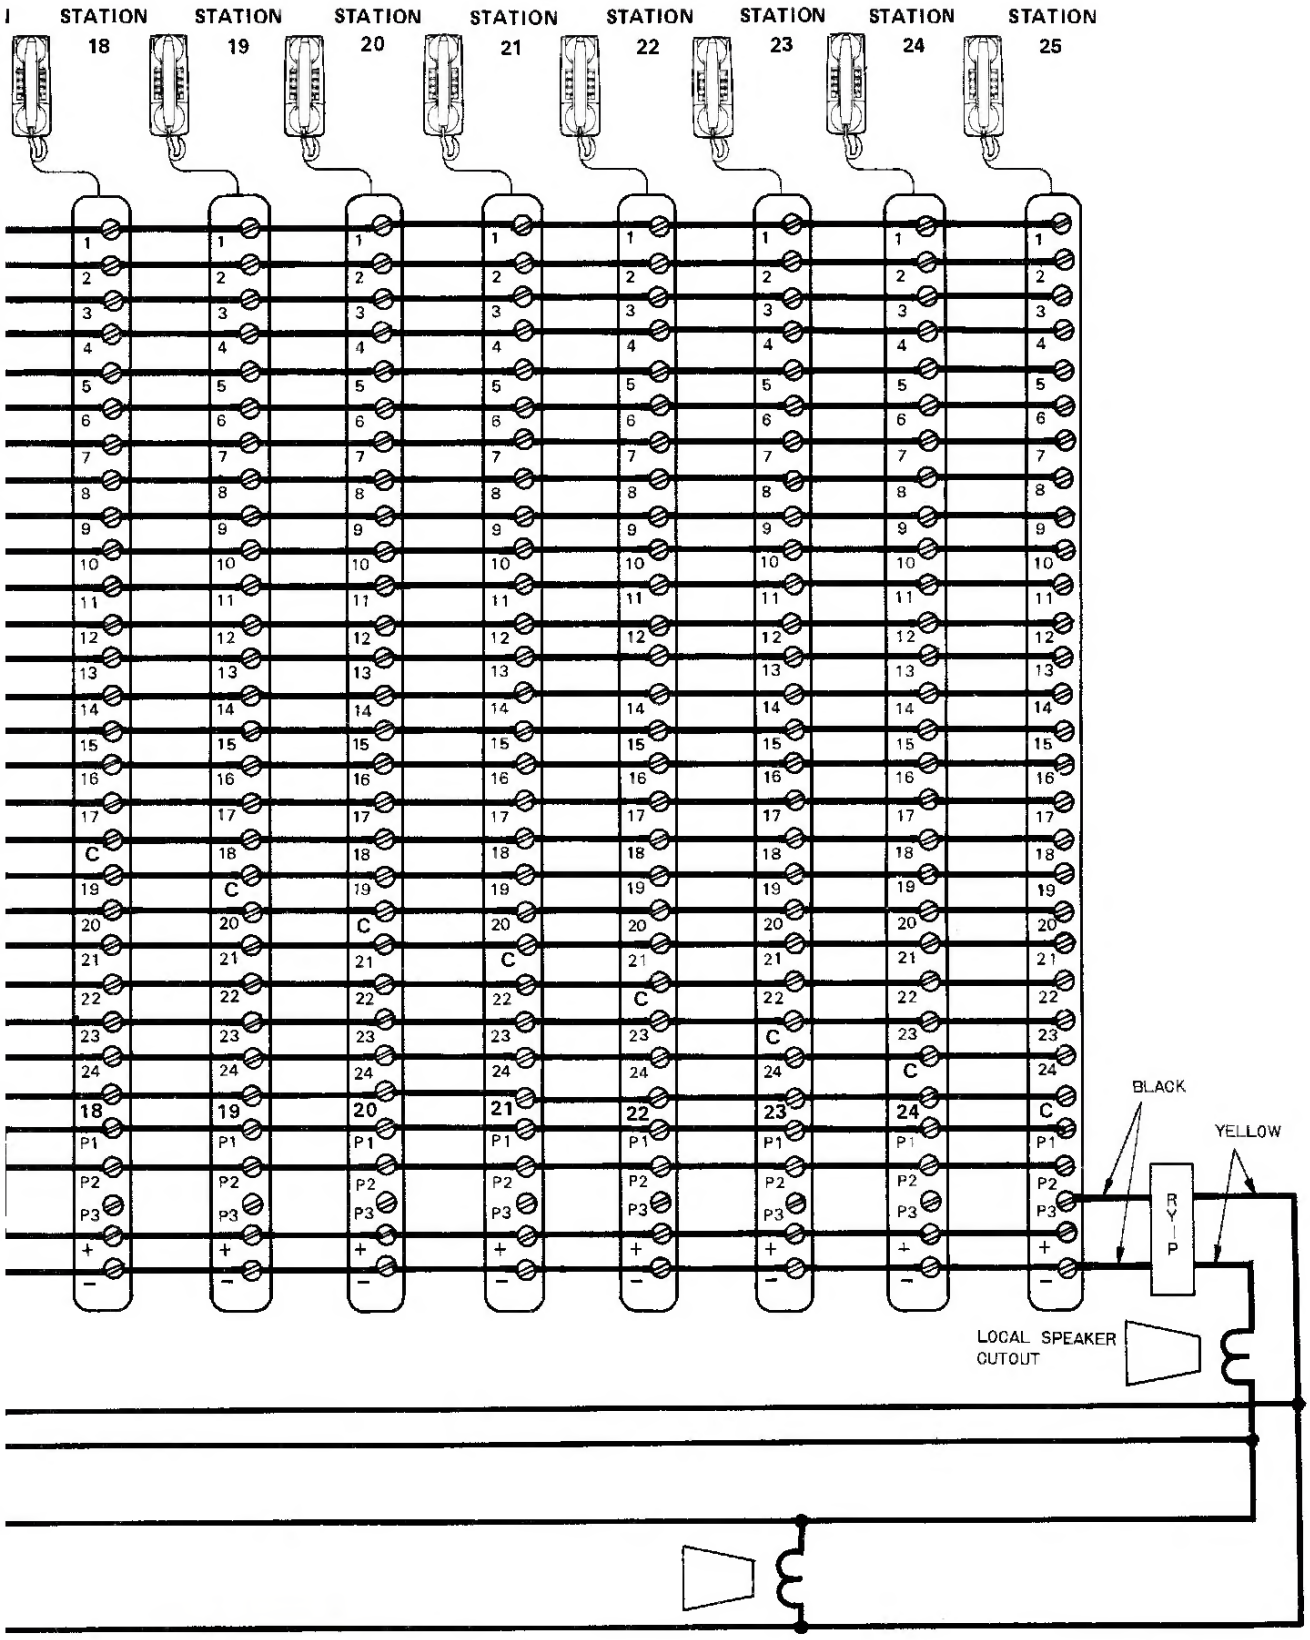

Downloaded from www.Manualslib.com manuals search engine

Introduction

Thank you for purchasing this television set.
This handbook has been designed to help you install and operate your TV set.
We would strongly recommend that you read it thoroughly.

Table of Contents

Installation

Presentation of the LCD Television 2
Remote control 2
Remote control keys 3-4
Installing your television set 5
Quick installation 5
Program sort 6
Manual store 6
Other settings in the Install menu 6

Operation

Picture settings 7
Sound adjustments 7
Feature settings 7
Screen Formats 8
Teletext 9
Using the radio 10
Using in PC monitor mode 10
Using in HD (High Definition) Mode 11

Peripherals

Video recorder 12
Other equipment 13
Side connections 13
HD equipment 13
Computer 13

Practical information

Tips 14
Glossary 14

Recycling

The packaging of this product is intended to be recycled. Apply to the local authorities for correct disposal.

Disposal of your old product.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal households waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Downloaded from www.Manualslib.com manuals search engine

Español

Avisos de seguridad y normas

Declaración de la FCC

Este dispositivo ha sido probado y se ha verificado que cumple con los límites correspondientes a un dispositivo digital de Clase B, de acuerdo con el Apartado 15 de las Reglamentaciones de la FCC. Dichos límites se han diseñado para ofrecer una protección razonable frente a interferencias perjudiciales en las instalaciones residenciales. Este equipo genera, utiliza, y puede radiar energía de radiofrecuencia y, de no ser instalado y utilizado de acuerdo con las instrucciones, puede causar interferencias perjudiciales para las comunicaciones por radio. Sin embargo, es posible que en algunos casos genere interferencias en una determinada instalación. Si este equipo ocasiona interferencias con la recepción de radio o televisión, lo cual puede determinarse apagando y volviendo a encender el equipo, aconsejamos al usuario que trate de corregir la interferencia utilizando uno de los siguientes procedimientos:

- Reoriente o cambie de lugar la antena receptora.
- Aumentar la distancia entre el dispositivo y el receptor.
- Conectar el dispositivo a una toma de corriente de un circuito distinto de aquél al que esté conectado el receptor de radio o TV.
- Consulte al distribuidor o a un técnico experto en radio o televisión para obtener ayuda.

Declaración de conformidad CE

Por la presente, Acer Inc., declara que este monitor LCD cumple con los requisitos esenciales y con otras disposiciones pertinentes según la directiva de compatibilidad electromagnética 2004/108/CE, la directiva de bajo voltaje 2006/95/CE y la directiva 2002/95/CE de restricción de ciertas sustancias peligrosas en aparatos eléctricos y electrónicos.

Directiva EMC 2004/108/EC según lo certifica el cumplimiento de las siguientes normas armonizadas:

-. EN55022:1998 + A1:2000 + A2:2006, AS/NZS CISPR22:2006, Class B

-. EN55024:1998 + A1:2001 + A2:2003

-. EN61000-3-2:2006,Class D

-. EN61000-3-3:1995 + A1:2001+A2:2005

Aviso: Cables blindados

Todas las conexiones a otros dispositivos informáticos deben efectuarse utilizando cables blindados para mantener los requisitos de las normas de la EMC.

Aviso: Dispositivos periféricos

Solamente los dispositivos periféricos (dispositivos de entrada/salida, terminales, impresoras, etc.) certificados, que cumplan con los límites de la Clase B, pueden conectarse a este equipo. El funcionamiento con periféricos no certificados puede causar interferencias en la recepción de radio y TV.

Precaución

Los cambios o modificaciones no aprobados expresamente por el fabricante pueden invalidar la autorización del usuario para utilizar este ordenador, concedida por la Federal Communications Commission (Comisión Federal de Comunicaciones).

Condiciones de funcionamiento

Este dispositivo cumple la Sección 15 del Reglamento FCC. Su funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no puede ocasionar interferencias perjudiciales y (2) este dispositivo debe aceptar toda interferencia recibida, incluidas las interferencias que puedan afectar a su funcionamiento normal.

Aviso: Usuarios de Canadá

Este dispositivo digital de Clase B cumple con la normativa canadiense ICES-003. Remarque a l'intention des utilisateurs canadiens Cet appareil numerique de la classe B est conforme a la norme NMB-003 du Canada.

Disposición de la lámpara

Hg

LAS LÁMPARAS DE ESTE PRODUCTO CONTIENEN MERCURIO, POR LO QUE SE DEBEN RECICLAR O DESECHAR DE CONFORMIDAD CON LA LEGISLACIÓN FEDERAL, ESTATAL O LOCAL. PARA MÁS INFORMACIÓN, PÓNGASE EN CONTACTO CON ELECTRONIC INDUSTRIES ALLIANCE EN EL SITIO WEB: WWW.EIAE.ORG. PARA OBTENER INFORMACIÓN SOBRE EL DESECHO ESPECÍFICO DE LAS LÁMPARAS, VISITE: WWW.LAMPRECYCLE.ORG.

Downloaded from www.Manualslib.com manuals search engine

Different volume level for a specific TV channel

Not all TV channels broadcast volume at the same level.
With this function you can alter the volume level of one channel with respect to the others.

- Press MENU button for at least 4 seconds.
- ▹ Immediately **VOLUME** appears, keep on pressing until "⊿/**PROGRAM**" appears.
- Press **P** — or + to select the program you wish to alter.
- Press — or + to adjust the volume level.

- Press the two buttons ◇ and ◇ simultaneously to store the volume level.
- ▹ **STORED** appears for a few seconds.

- Select another TV channel to adjust the volume level or press MENU several times to leave the menu.

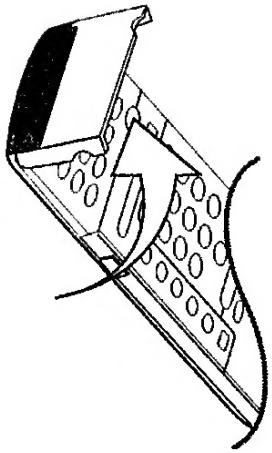

Teletext

A number of TV channels broadcast information via teletext. Teletext is an information system wbich can be consulted in the same way as a newspaper or magazine.

Teletext Time

The time can only be called up if the TV channel you are watching is also broadcasting teletext.

- Press ◕.
- ▹ The time appears.
- Press ◕ again to switch off the time.

Switching Teletext On and Off

- Select the TV channel for the desired teletext broadcast.
- Press ▤ to switch on the teletext.
- ▹ The contents appear on the screen together with an information line at the top.
  In the information line appears:
  - the number of the page requested.
  - the page counter.
  - date and time.

  - only **P 100** will be seen if there is no teletexr broadcast.

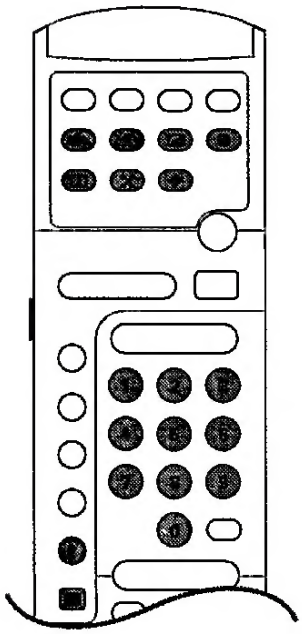

- Press ▤ again to switch off the teletext.
- ▹ Tbe TV channel reappears.

Selecting a Teletext Page

Direct page selection

- Enter the desired page number with the digit buttons. The page always has 3 digits.
- ▹ The page counter seeks the page.
- ▹ If the counter keeps searching, then the page is not available or does not exist.

If **P ?...** *appear or if you have you entered an incorrect number?*
First complete the number with random figures and then enter the correct page number again.

Selection with the options line

Signs red — and blue + of the option line enable the direct selection of the following or the previous page.

- Press the red button or the blue button on the remote control to select either the previous or the following page.

or

Certain teletext systems allows a quicker access to the beadings; in this case the section names are displayed in the option line.

- Select the desired subject with the corresponding colour button on the remote control.

Downloaded from www.Manualslib.com manuals search engine

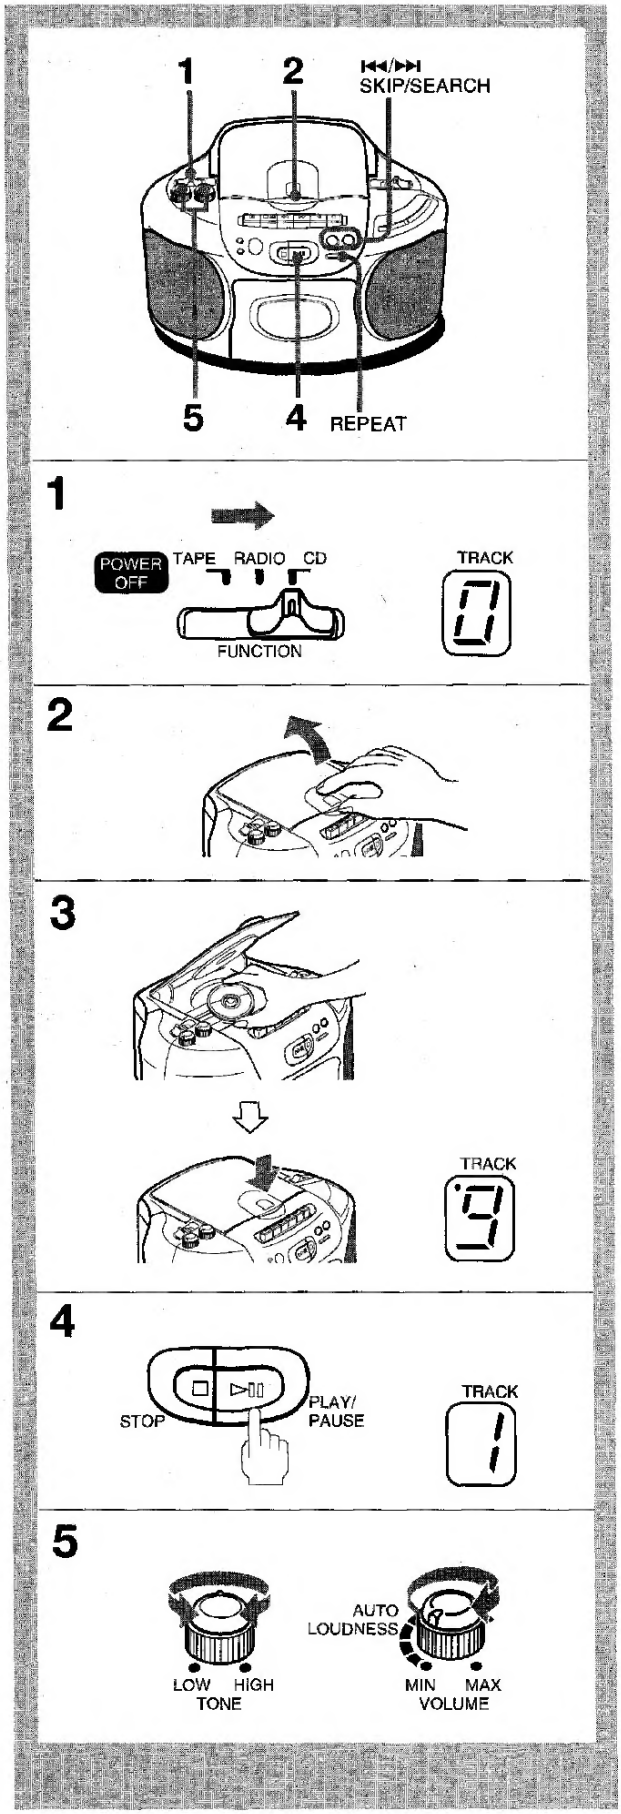

LISTENING TO A COMPACT DISC

1 **Set the FUNCTION switch to CD.**
OPE/BATT indicator turns on. 0 is displayed in the TRACK display.

2 **Open the disc compartment.**

3 **Place a disc in the center with the label side up and close the disc compartment.**
Total number of tracks on the disc is displayed in the TRACK display.

4 **Press the ▶II PLAY/PAUSE button to start CD play.**
Track number is displayed in the TRACK display.

5 **Adjust the volume and tone.**

Basic operation
Press the following buttons.

To stop	■ STOP button
To pause	▶II PLAY/PAUSE button To resume play, press the button again.

After listening
Set the FUNCTION switch to POWER OFF/TAPE.

About AUTO LOUDNESS
At low volumes, the high and low frequencies sound faint. AUTO LOUDNESS function automatically emphasizes these frequencies, for the powerful sound even at low volumes.

TRACK number display
The track number is displayed. The track number flashes while the CD play is paused.

e.g. The 3rd track 3
The 10th track • and 0
The 16th track • and 6
The 25th track • (flashes) and 5
The 34th track • (flashes) and 4

NOTE

- Do not place more than one disc in the disc compartment at the same time.
- If the video image of a nearby television is distorted or noise is heard from a radio during CD play, move the unit further away from the affected television or radio.

Downloaded from www.Manualslib.com manuals search engine

Turning on your camera

Press and hold down the Power (⏻) button for 1 second to turn on the camera.

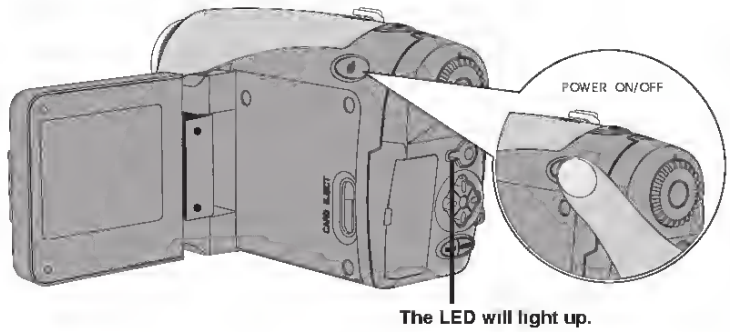

(!) If the camera is not turned on after pressing the power button, please check:
1. There are four AA batteries installed in the camera.
2. The batteries have enough power left.
3. The polar(+ -) directions of the installed batteries are correct.

Turning off your camera

Press and hold down the Power (⏻) button for 1 second to turn off the camera.

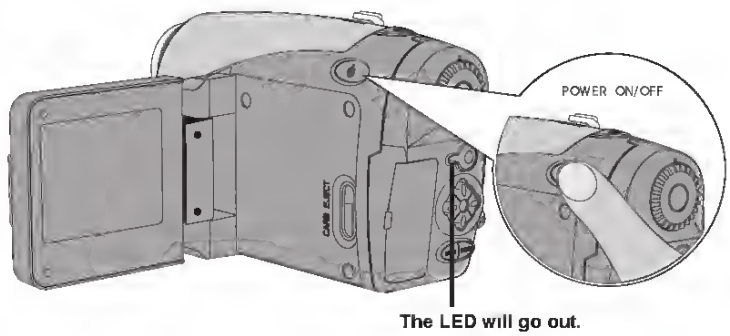

Downloaded from www.Manualslib.com manuals search engine

152963030en per uk.qxp 25/03/2004 15.34 Pagina 12

4. To change the level, press button **1**. Each time the button is pressed the level changes. (For the selection of the new level see the chart).

   Examples:

   If the current level is 5, by pressing button **1** once, level 6 is selected.

   If the current level is 10, by pressing button **1** once, level 1 is selected.

5. To memorise the operation, switch off the dishwasher by pressing the On/Off button or wait about 60 seconds after which the dishwasher will automatically return to setting mode.

Downloaded from www.Manualslib.com manuals search engine

DUBBING A TAPE MANUALLY

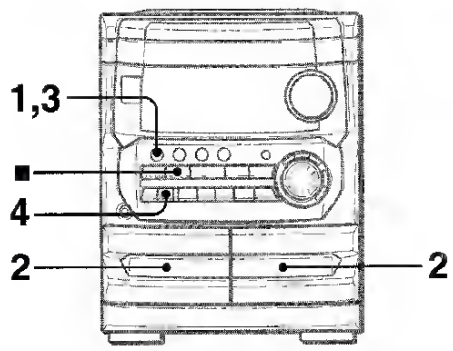

NOTE

- Set the tape to the point where recording will start.
- Note that recording is done on only one side of the tape.

1 **Press TAPE.**

2 **Insert the original tape into deck 1 and the tape to be recorded on into deck 2.**
Insert the tapes with the sides to be played back or recorded on facing out from the unit.

3 **Press TAPE DECK 1/2 to select deck 1.**
"TP 1" is displayed.

4 **Press ● REC/REC MUTE to start recording.**
Playing and recording start simultaneously.

To stop dubbing
Press ■.

DUBBING THE WHOLE TAPE

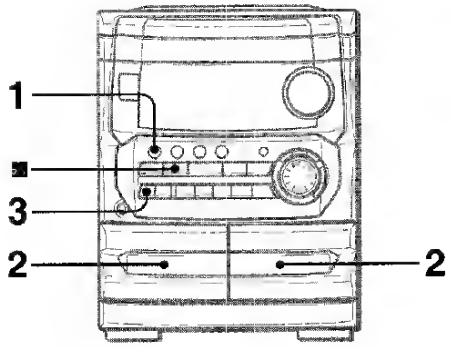

This function allows you to make exact copies of the original tape.

NOTE

- Dubbing does not start from a point halfway in the tape.
- Note that recording is done on only one side of the tape.

1 **Press TAPE.**

2 **Insert the original tape into deck 1 and the tape to be recorded on into deck 2.**
Insert each tape with the side to be played back or recorded on facing out from the unit.

3 **Press SYNC DUB to start recording.**

The tapes are rewound to the beginning of the front sides, and recording starts.

To stop dubbing
Press ■.

En

Downloaded from www.Manualslib.com manuals search engine

English

Control Panel

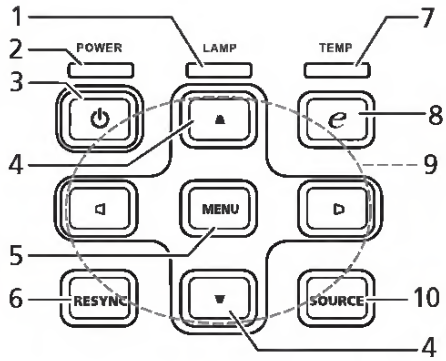

#	Function	Description
1	LAMP	Lamp indicator LED
2	POWER	Power indicator LED
3	Power key	Refer to the "Turning the Projector On/ Off" section.
4	Keystone	Adjusts image distortion caused by tilting projection (±40 degrees).
5	MENU	• Launches the Onscreen Display (OSD) menu, returns to the previous step for the OSD menu operation or exits the OSD menu. • Confirms your selection of items.
6	RESYNC	Automatically synchronizes the projector to the input source.
7	TEMP	Temp indicator LED
8	Empowering key	Enables unique Acer functions: eView, eTimer, ePower Management.
9	Four directional select keys	Selects items or makes adjustments to your selection.
10	SOURCE	Chooses RGB, component video, S-Video, composite video, HDMI™ or HDTV source.

Downloaded from www.Manualslib.com manuals search engine

PCB CONDUCTOR VIEW

MAIN BOARD

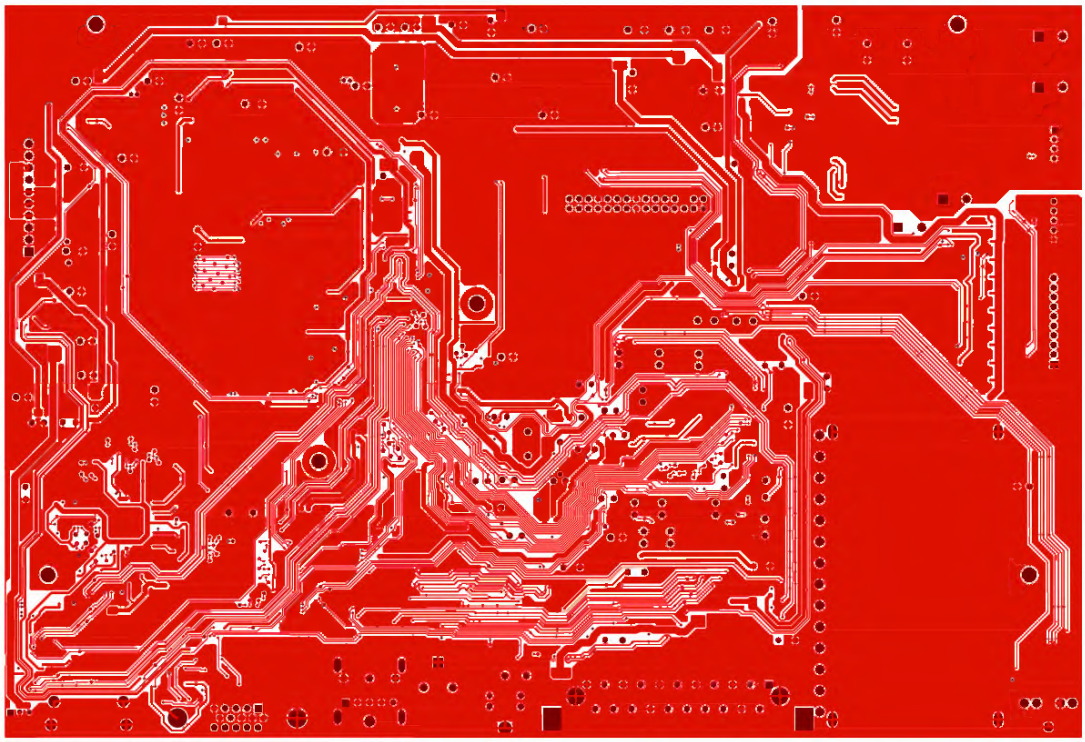

Downloaded from www.Manualslib.com manuals search engine

Selecting the Reference

The XVC-1001-DC card provides four sources for referencing the outgoing video signal. At the bottom of the **Card Setup** window, the reference selection can be chosen from a drop down menu. The reference selection is automatically saved and will be restored after power-up.

The XVC-1001-DC accepts tri-level, bi-level and black burst reference signals.

Reference Selection

The **Reference Selection** function allows the user to select from 4 possible synchronization signals.

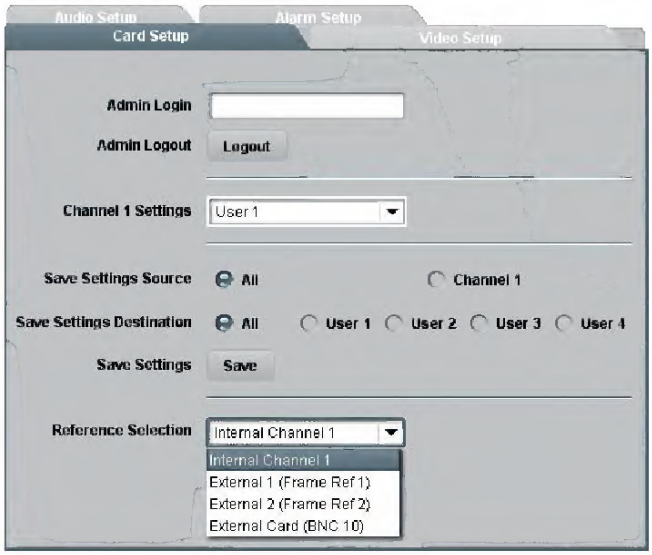

Select from:

Internal Channel 1: Extracts the reference from the channel 1 (input 1) video signal. The input 1's reference signal can be independent from the house sync signal and be of a different frame rate.

External 1 (Frame Ref 1): The openGear frame has a distributed frame reference, allowing a single incoming reference sync signal to feed information to all modules in a frame. External 1 uses the reference signal from the openGear frame's REF 1 input. The XVC-1001-DC's video input 1 must be genlocked with the openGear's REF 1 input to use that selection.

External 2 (Frame Ref 2): External 2 uses the reference signal from the openGear frame's REF 2 input. The XVC-1001-DC's video input 1 must be genlocked with the openGear's REF 2 input to use that selection.

ded from www.Manualslib.com manuals search engine

- The hot air oven is extremely versatile since you can cook a complete meal in it. You can cook different foods at the same time, such as fish and cakes, without any transfer of smell or taste from one to the other.
- When menu cooking try to choose foods which require similar cooking temperatures.
- When cooking meat in uncovered containers the **fat filter** must be inserted.
  When cooking pies or cakes at the same time as a roast you can choose pies or cakes which normally cook at temperatures 20 °C lower than the roast. Temperature differences of 10 °C lower than the roast can be compensated by longer or shorter cooking times.
  Shelf positions are chosen according to the food being cooked and in connection with the cooking guidelines in the recipe book supplied.

Menu suggestion:	Meat Loaf Potato Bake Buttered Carrots Fruity Rice Pudding
Ovenware:	Oblong ovenproof dishes
Shelf positions:	Meat Loaf & Potato Bake Side by side 3rd from top Carrots and Fruity Rice Pudding Side by side 5th from top
Cooking method:	Hot Air
Temperature:	170–180 °C
Time:	Approx. 60–75 minutes

Downloaded from www.Manualslib.com manuals search engine